
1¼ in sink-deck hole

31.75 mm nominal deck opening / 32.0 mm spacer bore / 4.0 mm lift


Kohler Sundae

P1-R02-SU-125 53 × 53 mm

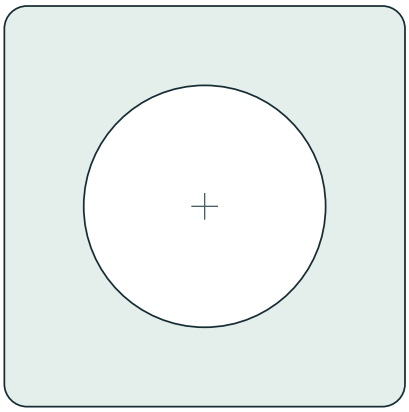


Delta Chamberlain

P1-R02-CH-125 Ø 43 mm

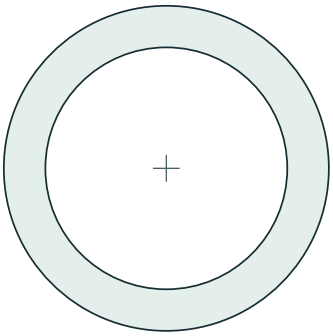


Moen Banbury

P1-R02-BA-125 Ø 48 mm

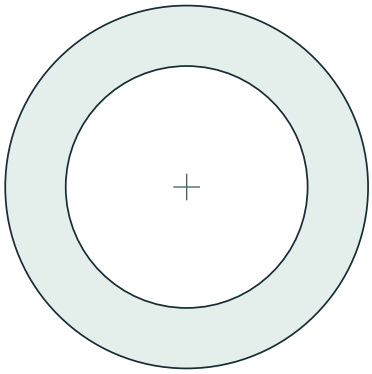

Delta Nicoli


P1-R02-NI-125 Ø 45 mm

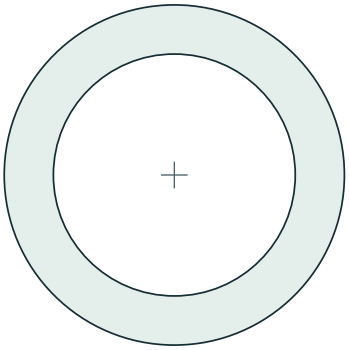

Check the scale before cutting

Print on US Letter at 100% / Actual Size.
Measure both scale bars with a ruler.

Cut along the inner and outer outlines. Center the paper under the handle. The entire bearing rim and gasket must land on the shaded area. Paper checks the footprint only. Test the 4 mm lift separately.

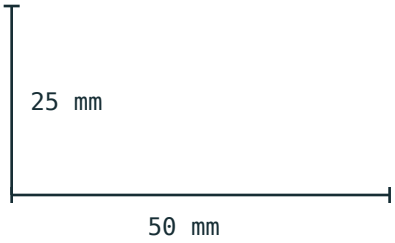


1⅜ in sink-deck hole

34.925 mm nominal deck opening / 35.2 mm spacer bore / 4.0 mm lift


Kohler Sundae

P1-R02-SU-1375 53 × 53 mm

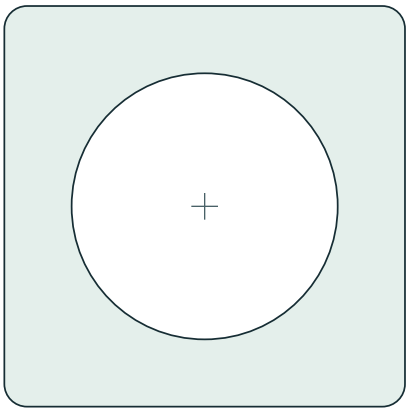


Delta Chamberlain

P1-R02-CH-1375 Ø 43 mm

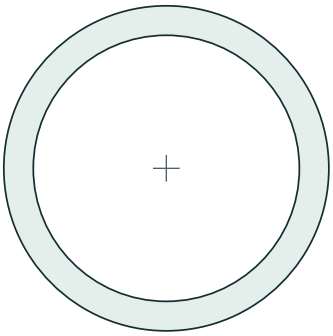


Moen Banbury

P1-R02-BA-1375 Ø 48 mm

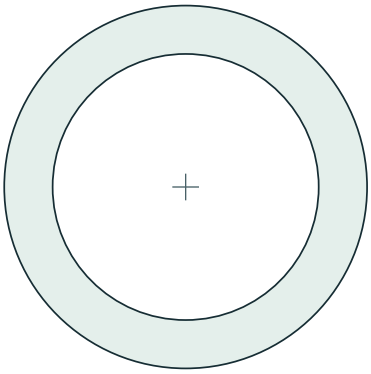

Delta Nicoli


P1-R02-NI-1375 Ø 45 mm

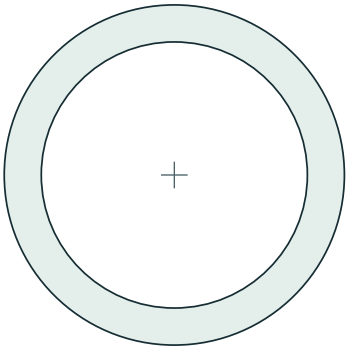

Check the scale before cutting

Print on US Letter at 100% / Actual Size.
Measure both scale bars with a ruler.

Cut along the inner and outer outlines. Center the paper under the handle. The entire bearing rim and gasket must land on the shaded area. Paper checks the footprint only. Test the 4 mm lift separately.

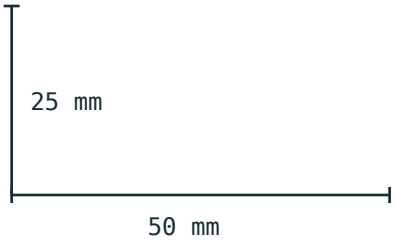

Use one profile for both handles. Leave the center spout on the deck.